

Installation:

- 1. Select proper dimensions from the dimension chart.
- 2. Locate "A" and "B" dimensions on door and frame.
- 3. Install jamb bracket on stop strip as shown.
- 4. Position channel on door with shock end located towards pivot. Drill 5/16 dia. sex bolt hole, "A" dimension 3/4 down from stop strip as shown.
- 5. Install channel on door with "A" dimension sex bolt. Locate "C" dimension sex bolt hole making sure that channel is horizontal and parallel with stop strip. Drill 5/16 dia. sex bolt hole and finish installing holder.

Notes:

- 1. All hollow metal frames should be properly reinforced with 3/16 min thickness × 12" min. length reinforcement plates.
- 2. All hollow metal doors are to be properly reinforced as shown.
- 3. All drilling and tapping to be done by filed men.
- 4. Suggest mounting door stop or holder first and then other hardware to clear.
- 5. Jamb bracket to be on same centerline as channel.
- 6. A, B and C dimensions are measured from center line of pivot, not edge of door.
- 7. All dimensions are given in inches.

Dimensions—OVS1000X					
Hinge	Model	Door opening	A	В	С
$1\frac{3}{4} \sim 2\frac{1}{4}$ Butts & $\frac{3}{4}$ Offset Pivot	OVS10001	18~24	$1\frac{3}{16}$	$3\frac{9}{16}$	$14\frac{13}{16}$
	OVS10002	$24\frac{1}{16}$ ~30	$3\frac{3}{4}$	$4\frac{3}{16}$	16
	OVS10003	30 <u>1</u> ~36	$6\frac{9}{16}$	$5\frac{3}{8}$	$17\frac{3}{4}$
	OVS10004	$36\frac{1}{16} \sim 42$	$9\frac{13}{16}$	$7\frac{1}{16}$	$20\frac{3}{16}$
	OVS10005	$42\frac{1}{16}$ ~48	$13\frac{3}{4}$	$8\frac{5}{16}$	22
Center Hung	OVS10001	$21^{2}6\frac{1}{2}$	$1\frac{5}{8}$	4	$14\frac{13}{16}$
	OVS10002	26 9 ~32	$4\frac{7}{16}$	$4\frac{7}{8}$	16
	OVS10003	32 1 16~38	$7\frac{3}{16}$	6	$17\frac{3}{4}$
	OVS10004	38 <u>1</u> ~45	$10\frac{3}{8}$	$7\frac{5}{8}$	$20\frac{3}{16}$
	OVS10005	$45\frac{1}{16}$ ~48	$14\frac{5}{16}$	$8\frac{7}{8}$	22

Adjust the degree of stop:

- 1. Us a 3/16 hexagon key wrench, loosen the set screw in the shock block.
- 2. Open door to desired degree of opening.
- 3. Slide shock block and spring until the spring touches slider cam.
- 4. Tighten set screw.
- 5. Verify door opening position and re-adjust ad needed.

